









#### **IQS240 Features**

### 4-Channel Touch Sensor with advanced Proximity detection capability

- Class leading proximity sensitivity
- Direct, Coded and Serial Operation
- Automatic Environment Compensation
- On-Chip Integrated Series regulator
- On-Chip Digital Signal Processing
- Synchronisable to external source (including AC supply voltage)
- Suitable for various dielectric overlays
- Detect Touch through an overlay of up to 7mm
- User selectable Proximity and Touch sensitivity settings
- Low Power Mode suitable for battery applications (27uA)
- Available in SO-20 and QFN4x4-20 packages

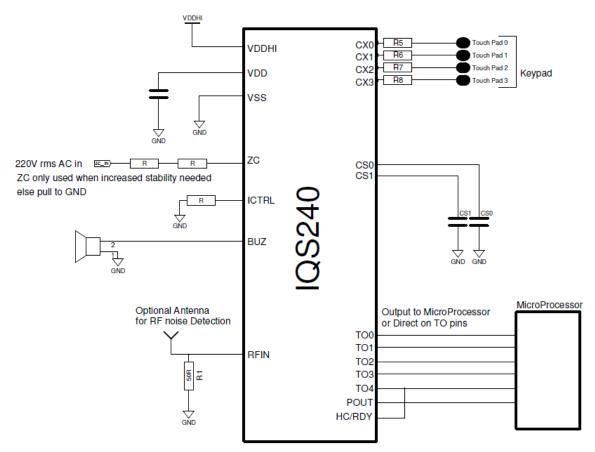


Figure 1: Typical Connection Diagram for IQS240

### **IQS240EV02 Evaluation Kit**






IQS240 is offered in SO-20 and QFN(4x4)-20 packages. The module is assembled with an SO-20 device.

**Standalone Mode:** Connect V<sup>+</sup> and V<sup>-</sup> to supply voltage or flip switch to ON position if optional battery kit is supplied. (Note: Remove battery before connecting to PSU). Connecting the unit to a grounded supply will improve stability and sensitivity.

**Debug Mode:** Module can be connected to VisualProxSense on the SPI header to evaluate the real-time working of the IQS technology (see Application Note for further details: "AZD006 – Visual ProxSense overview").

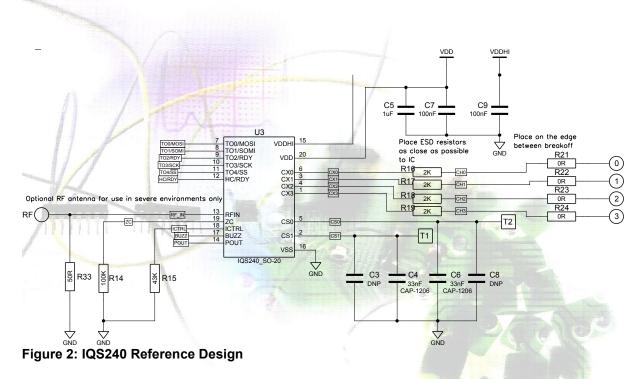

The module is designed such that the keypad section may be reversed from the main board. This allows the main unit to be connected to a project keypad for prototyping.



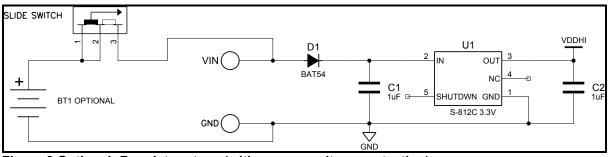


Figure 3 Optional: Regulator stage (with reverse voltage protection).

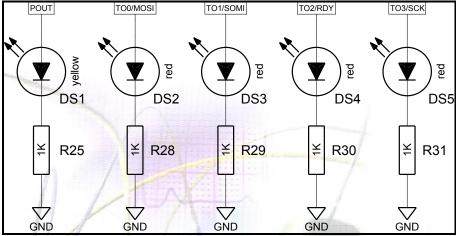


Figure 4: Optional LEDs to indicate active outputs in direct and coded mode (1 Proximity and 4 Touch indicators).

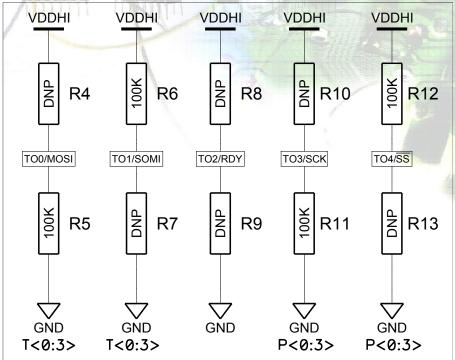


Figure 5: Optional external selections for prototyping. (See datasheet). Typically these settings will be programmed on-chip in mass production, negating the need for these resistors.



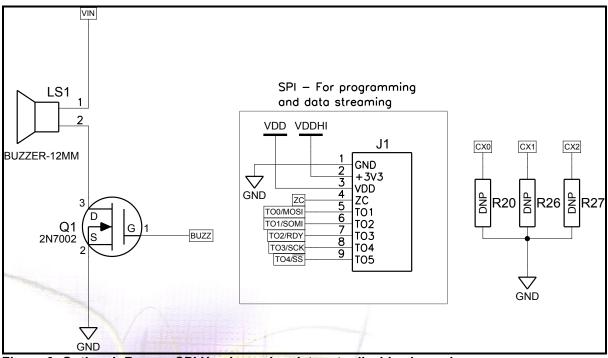


Figure 6: Optional: Buzzer, SPI Header and resistors to disable channels.

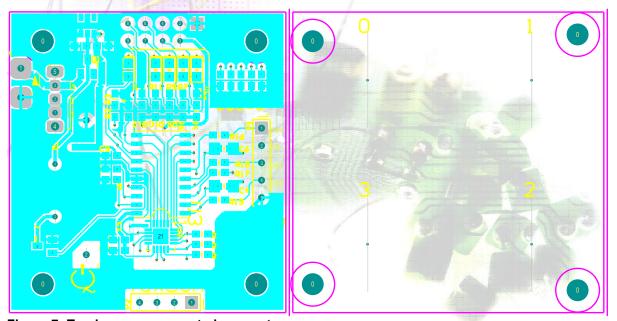


Figure 7: Top layer component placement





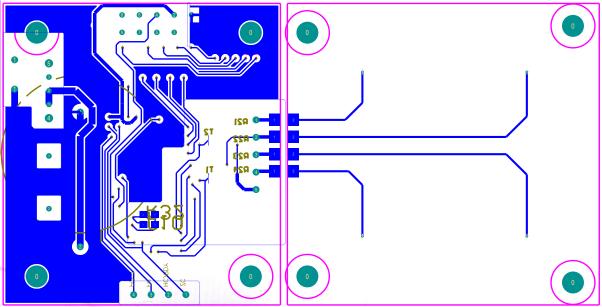


Figure 8: Bottom layer component placement



Please visit www.azoteq.com for a full portfolio of the ProxSense<sup>TM</sup> Capacitive Sensors, Datasheets, Application Notes and Evaluation Kits available. Samples, additional information and orders to be placed through ProxSenseSupport@azoteq.com